


ARM15 KIT D'AIR D125

Comprehensive manual of the kit of air for ARM15

01/2023


ARM15 Kit air D125mm

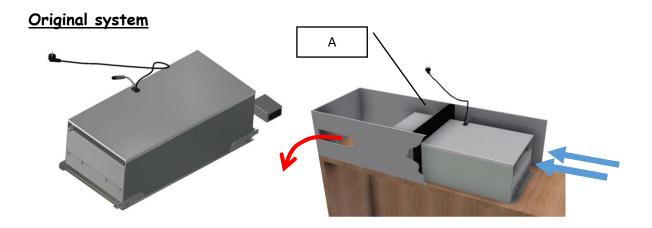

The free cross-section of each grid is 200 cm². Separation "A" is not provided. **Be sure to seal this separation.**


System with Kit air intake D125mm (option W1391)

In order to control the intake, you can add this kit at your ARM.

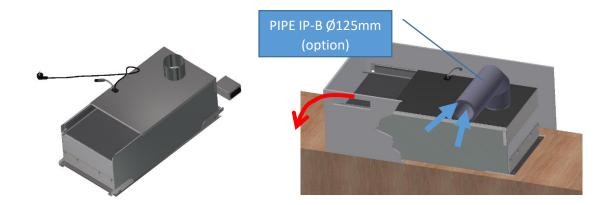

The free cross-section of each grid is 200 cm². With the kit, the separation A is not required. However, make sure that the distance between air intake and exhaust is sufficient to avoid that the hot air is recycle.

System with Kit air outlet or/and intake D125mm (optionW1393)

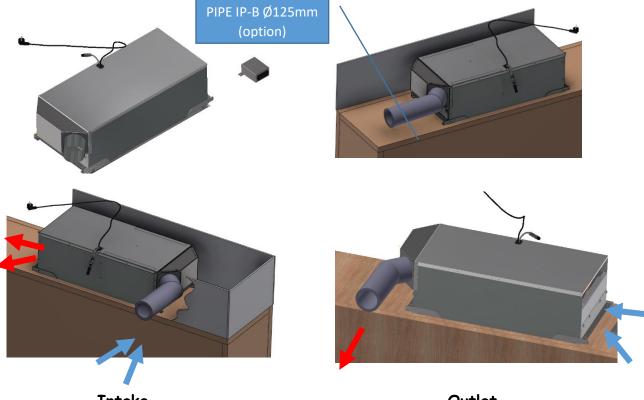

In order to control the intake or/and outlet, you can add this kit at your ARM.

Intake


Outlet

The free cross-section of each grid is 200 cm². With the kit, the separation A is not required. However, make sure that the distance between air intake and exhaust is sufficient to avoid that the hot air is recycle.


Possible configuration: 1m long maximum or an elbow + 0.5m maximum


1:	2 : 1x W1393	3 : 1x W1393
4 : 1xW1391	5 : 1x W1393 + 1xW1391	6 : 2x W1393

Overall dimensions.

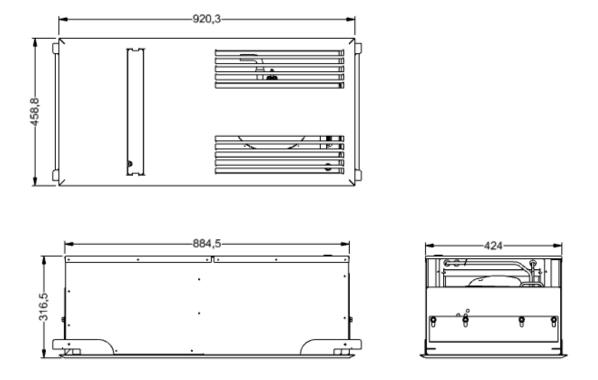



Kit air intake D125 (option: W1391)

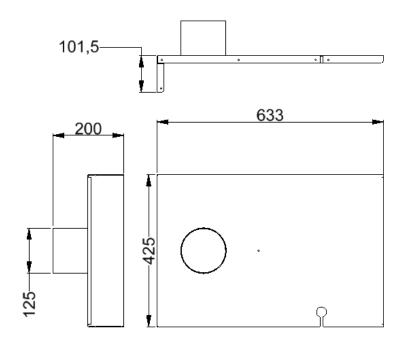

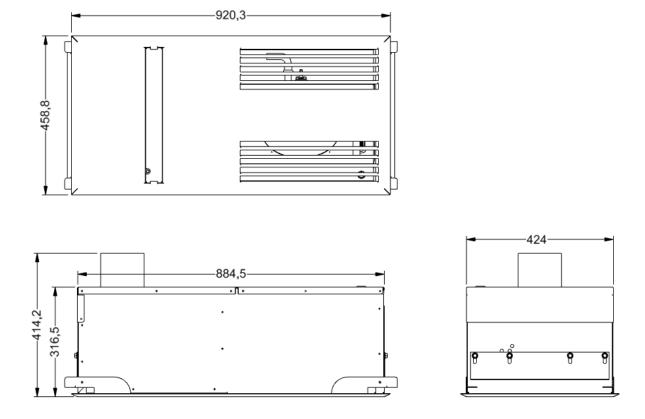

Kit air D125 (option: W1393)

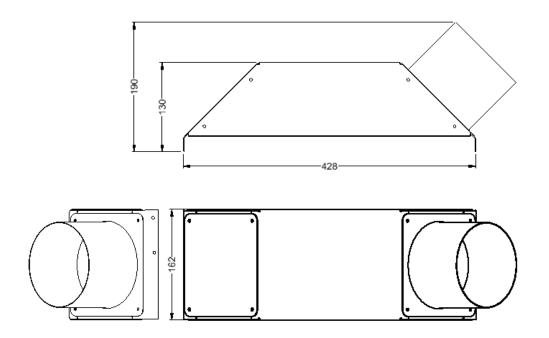

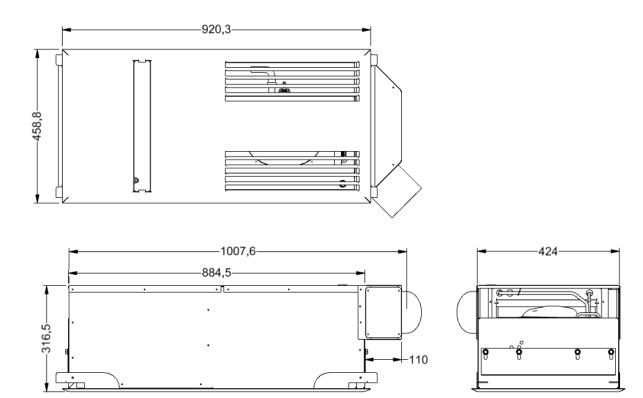

IP-B D125 (option)

REF	Description	VIEW
W2550	PIPE D1250 – 2M	
W2551	CLAMP D125	
W2552	ELBOW 90° D125	

W2553	ELBOW 45° D125	
W2554	SLEEVE D125	